

Instruction Manual

2 IN 1 Emulator EX534



Warning

- This emulator is only applicable to three-cylinder and four-cylinder EFI engines
- The working voltage of the emulator is DC 12V
- The emulator installation should be waterproof and away from heat sources
- The emulator is far away from the high-voltage ignition system and maintains good insulation

Instructions

- The 6-digit DIP switch near the edge of the circuit board is the first
- The first digit is ON, indicating that the oxygen simulation signal is valid, that is, the yellow wire in the harness has a standard oxygen simulation signal output
- Please check the correctness of wiring after connection
- After checking, start the engine, and the switching RPM is adjusted according to the use requirements to make the engine reach the normal switching conditions
- This product has a gas start function. Turn the key switch to the ON position, don't start the engine. At this time, the switch light is on. Press and hold the switch button for more than 5S. At this time, the high-pressure solenoid valve is opened, the gas mode lamp red/yellow light flashes, and the engine gas is started. At this time, the emulator is stored as the gas start mode, re-open the key emulator run the gas start mode automatically, if you need to switch to the petrol/gas conversion mode, you must exit the gas start mode. Turn the key switch to the ON position and do not start the engine, at this time the switch light is on. Press and hold the switch button for more than 5S. At this time, the switch solenoid valve is closed, the switch lamp returns to the petrol and gas display mode, and enters the normal petrol/gas conversion mode.

警告

 
- 本仿真器仅适用于三缸和四缸电喷发动机
- 仿真器的工作电压为 DC 12V
- 仿真器安装应注意防水，远离热源
- 仿真器远离高压点火系统并保持良好的绝缘

使用说明


- 6 位拨码开关靠近电路板边缘的是第一位
- 第一位为 ON 表示氧仿真信号有效，即线束中黄色线有标准的氧仿真信号输出
- 线路接线完成后请仔细核对接线的正确性
- 核对无误后启动发动机，并根据使用要求调整切换转速使发动机达到正常切换条件
- 本产品具有气启动功能，将钥匙开关到 ON 档位置，不启动发动机，此时开关灯亮。长按开关按钮保持 5S 以上，此时高压电磁阀打开，气模式灯红/黄灯闪烁，启动发动机气启动完成。此时，仿真器存储为气启动模式，重新打开钥匙仿真器自动运行气启动模式，如需切换到油/气转换模式，必须退出气启动模式。将钥匙开关到 ON 档位置，不启动发动机，此时开关灯亮。长按开关按钮 5S 以上，此时开关电磁阀关闭，开关灯恢复油气显示模式，进入正常的油/气转换模式。

6位板载内部拨码开关设置 6Way Switch Interior Setting


第一位为ON表示氧仿真信号有效, 2-6位设置压力传感器类型
The 1 way is ON, indicating that the oxygen simulation signal is valid, and the pressure sensor type is set at 2-6 way.

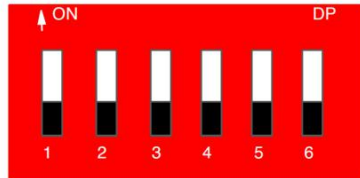

 
G01(Exon-gas) 压力表
G01(Exon-gas) Level Sensor

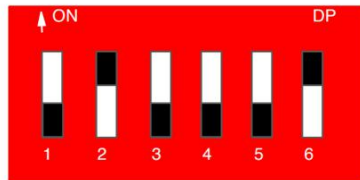

0-90欧姆 压力表
0-90 Ω Level Sensor

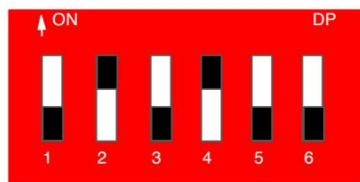 

100-10K 欧姆 压力表
100-10k Ω Level Sensor

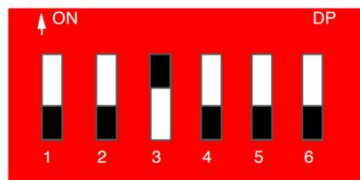 

0-5V电压输出压力表
0-5VSignal Level Sensor

切换转速设置 Change-over RPM Setting

